




THERMOHYGROMETER 0310-H26 User Manual

PLEASE SCAN QR CODE TO
WATCH THE OPERATION
VIDEO OF PRODUCTS.



1. Meter Description

- 1-Temperature/Humidity Sensor
- 2-LCD Display
- 3-Data Hold/Backlight button
- 4-MAX/MIN button
- 5-Power on/off button
- 6-Temperature button
- 7-Bluetooth button

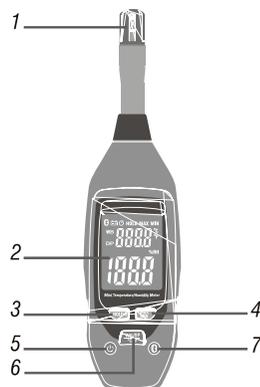

2.Features

- 1.Range:0.0~80.0%RH,0.0~50.0°C(32°F~122.0°F);Resolution:0.1%RH, 0.1°C/0.1°F
- 2.Dual Display Temperature& Humidity
- 3.Bluetooth 4.0
- 4.MAX/MIN
- 5.HOLD lock and backlight
- 6.Measurable Dry bulb temperature, Wet bulb temperature, Dew point Temperature
- 7.Temperature unit switch
- 8.Auto power off,Disable auto-power off

3.Specifications

Function	Range	Resolution	Accuracy
Humidity	(0-80)%RH	0.1%RH	±5.0%RH
Ambient temperature	(0-50)°C (32~122)°F	0.1°C/0.1°F	±1°C/+1.8°F
Wet bulb temperature	(0-50)°C (32 -122)°F	0.1°C/0.1°F	±1°C/+1.8°F
Dew point temperature	(0-50)°C (32-122)°F	0.1°C/0.1°F	±1°C/+1.8°F

Display	Dual digital LCD display with backlight
Sensor Type Humidity:	Accurate capacitance sensor
Temperature:	Thermistor
Low battery indication	The low battery signal ' ⏻ ' flash when battery voltage drops below 7.2V;The backlight and low battery signal ' ⏻ ' twice when battery voltage drops below 6.5V, then auto power off.
Operating condition	0°C ~ 50°C(32°F ~ 122°F)<80%RH non-condensing
Storage condition	0°C ~ 50°C(32°F ~ 122°F)<80%RH non-condensing
Power	One standard 9V battery.
Dimension	204(L)×54(W)×36(H) mm
Weight	172g

4.Operation instructions :

1. Power on/off,Auto-power off:

Power on: Short press button ' ⏻ ' to power on, system default auto power off . Long pressto power on and disable auto power off function. Long press the button again to enable the auto power off function.

Power off: Short press button ' ⏻ ' to power off.

Auto-power off:Auto-power off signa ' ⏻ ' displays in the left coner of LCD and the instrument will auto-power off in 10minutes of no button operations.

If press the power on/off button for over 1minutes,then it will be recognized as faulty operation and the instrument will auto power off.

2.Temperature Short press to switch the measure temperature type:NULL (dry bulb temperature) → WB (wet bulb temperature) →DP (Dew point temperature) → NULL (dry blub temperature), cycle in this orde. Default measure dry blub tempera-ture;Long press temperature button to switch temperature unit,and cycle in turn °C→°F →°C, default unitis the last unit before power off.

3.Bluetooth:

Long Press once to enable the Bluetooth communication function; Long press once again to disable the function.

4.MAX/MIN:

Press MAX/MIN button once and 'MAX' appears on the display. The LCD is now displaying the maximum reading of the selected parameter in the display. The display reading will not change until a higher reading is registered.

Press the MIN/MAX button again and 'MIN' appears on the display. The LCD is now displaying the minimum reading of the selected parameter in the display. The display reading will not change until a lower reading is registered.

Press the MIN/MAX button once again to exit the MIN/MAX mode, no 'MAX/MIN' display on the LCD now.

Cycle in order: NULL →MAX→MIN→NULL.

5.HOLD /Backlight:

Press Hold/backlight Button to enter hold function,the LCD displays 'HOLD'. At hold mode, only power button and Hold/backlight button is enabled. Short press the button again to disable the hold function, no 'Hold' displays on LCD. Long press to enable backlight and long press once again to disable the backlight. (Note: button 2,3,4,5 can be enabled only when the instrument is power on.)

6. DataRecorder Operation:

Download 'INSIZE DataRecorder' APP to the mobile phone before using the Bluetooth communication function. Search the APP name 'INSIZE DataRecorder' at APP Store (for IOS) or scan the QR code (for android) to download the APP.



5.Maintain

1. The instrument should be cleaned with a damp cloth and non-irritating cleanser when necessary.

Do not use corrosive and irritating cleanser.

2. Pls keep the instrument in proper temp and humidity environment.

6.Battery Replacement

If the low battery signal appears on the LCD display, it indicates that the battery should be replaced. Open the battery cover with scwre, then replace the exhausted battery with new battery.

