INSIZE

www.insize.com

**7305-IST
DATA OUTPUT CABLE
OPERATION MANUAL**

V0

INSIZE
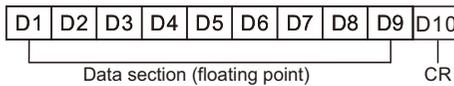
Adapted product

It can be connected with **IST-17W** series wire transmission digital display torque wrench of our company

Data output button

Operating Instructions

Drive installation:

1 Driver download address:
www.insize.com/download/CP210x_Windows_Drivers.zip

2 Unzip package, double-click the installation program, and Install

Transmission mode:

1 Open any serial port send-receive software(such as serial port assistant), select the correct communication parameters(9600 N 8 1),and open the serial port

2 The torque wrench is switched to the peak mode (P), and the torque value is within the output range of tolerance setting, press the torque wrench M button to collect data(the collect button of the data output cable cannot be transmitted).