



**7516**  
**TABLE MAGNIFIER WITH ILLUMINATION**  
**OPERATION MANUAL**



## Maintenance

- ◆ Well protect the lens, do not touch the lens directly with your hand.
- ◆ Do not use table magnifier in harsh environments such as oil, moisture and dust.
- ◆ Wipe the lens with a professional lens cleaning paper, use the dust cover to protect the lens after use.

## Introduction

### Features:

- LED illumination, working life 20000h

### Specifications:


- Magnification: 2.25X
- Diopter: 5D
- Lens diameter: 122mm
- Illumination: power 3.5W, illuminance 420lm
- Power supply: 100-240V,50-60Hz

### Structure:



## Operation

- 1 First, install the holder to the edge of the desktop and tighten, then insert the table magnifier into the holder.

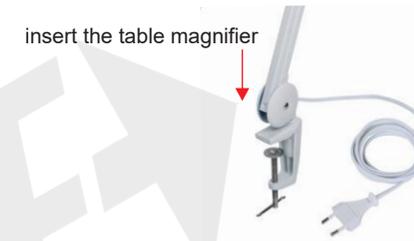

- 2 Adjust the joints and locking screws to the angle you want to observe.



- 3 Connect the power, turn on the light switch.
- 4 Place the workpiece under the lens, move the workpiece up and down until the enlarged image clear.