



www.insize.com



RXT-BM301 BLACK AND WHITE DENSITOMETER

OPERATION MANUAL

PLEASE SCAN QR CODE TO
WATCH THE OPERATION
VIDEO OF PRODUCTS.



CONTENT

Overview	1
Technical Specifications	2
Instrument Diagram	2
Operating Instructions	3
I. Measuring Density Values	3
II. Observing Samples	3
III. Calibration Function	4
Instruction of Calibration Method	4
Attention	7

OVERVIEW

The densitometer developed by our company is a quality product using computer calibration technology. It has advantages of accurate reading, high stability, strong anti-interference, attractive appearance and easy operation. It can be widely applied to the fields such as nondestructive testing, printing industry and medical industry etc. Each unit is equipped with density tablet and calibration software for its accuracy, which can be matched with density films of different standards.

SPECIFICATION

Blackness range	D=0.00~5.00
Reading stability	±0.02
Accuracy	±0.02 (0.0<D≤2.0) ±1% (2.0<D≤4.0) ±0.05 (4.0<D≤5.0)
Optical aperture	Ø2mm
Sampling time	0.8s
Display form	three-digit display
Interface	Rs232 (optional accessory USB cable)
Operation environment	0°C~40°C, relative humidity ≤85%
Power supply	220V, 50/60Hz
Dimension	260×265×110mm
Weight	2.1kg


STANDARD DELIVERY

Main unit	1pc
Black and white density film (0.0~5.0)	1pc
USB flash disk	1pc
RS232 cable	1pc

OPTIONAL ACCESSORY

USB cable	RXT-BM301-CA
-----------	--------------

INSTRUMENT DIAGRAM

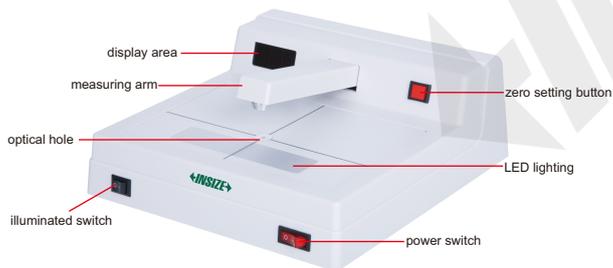

OPERATING INSTRUCTIONS

I. Measuring Density Values:

1. Press POWER button on the lower right corner of the device, the screen displays "--.--". The instrument should be preheated for 5 min.
2. Press the measuring arm down without putting any film, the screen displays "E.1". Keep holding the measuring arm while pressing the red *Zero Setting* button on the upper right corner of the device and the screen displays "0.00". Releasing the measuring arm in 2 seconds, the device will enter the density measuring mode.
3. Put the tested film on aperture point, and press the measuring arm, the density value will be shown on the screen.
4. While using the standard density tablet equipped with the instrument, the zero calibration should be done first, that is, do not put any density film, press the measuring arm and the *Zero Setting* button at the same time, the screen displays "0.00", then measure other points.

II. Observing Samples:

1. The tested samples can be observed after the LED light turned on at bottom left of the instrument.
2. Please keep the density tablet clean. Use it only when you are not sure about the accurate of the measured values.

If the value is not accurate, you can use calibrated step film and densitometer calibration software to calibrate the instrument.

3. When the density values are out of the prescribed range, the measurement data are still has reference value. Please contact the manufacture if there are quality problems.

III、 Calibration Function:

When using a density tablet of other brands or the error of indication beyond standard after a period of time, the instrument should be calibrated with calibration software to adapt to different density curves. (For details, please see the software instruction.)

Note : Instruction of Calibration Method

Summary: the software is used for our Black&White densitometer only, a standard density tablet is needed in the calibration process.

Principle: according to the standard values on the density tablet and the original measured values of densitometer, fitting out a calibration curve to compensate the nonlinearing of silicon photocell, and transmit the characteristic values of the curve to the densitometer.

Select the Serial Port:


Select the default serial port 1 when using standard communication cable. Or install the driver first if using USB connection cable, then open the "COM PORT" in the device manager to check the serial port number

Choose the number of density tablet

Please choose the number of points according to the standard density tablet in use, support 5 points, 7 points, 8 points, 10 points, 12 points, 14 points, 16 points, 18 points and 21 points. (Take the density tablet of 13 points as an example, please enter 0.00 for both the standard value and the measured value of the first point when using a density tablet of 14 points)

Read device version number:

Press this button to read the device version number after selected the serial port, it can also verify whether the pc communicate with the densitometer well or not. If the communication is normal, the instrument version number will be displayed in the text box below, the window displays 'E.5' at the same time.

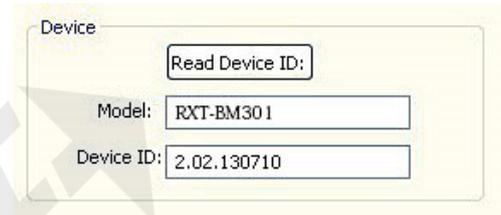

Delete the Calibration Value:

There are calibration curves in the densitometer, so the original calibration values must be deleted before new calibration. Press the button to delete the all the original calibration curve, and then the viewing window displays "E.4".

The densitometer displays "nnn" after power off and on again, it means there's no calibration curve in the densitometer, the measurement value is the original measured value, and the previous calibration data is deleted successfully. If the densitometer displays "----" after power off and on again, it means there is still calibration curve in the densitometer, the measurements are compensated correction.


Calibration:

- 1.Prepare a regular standard density tablet.
- 2.Enter the standard values of density tablet and original measured values of densitometer in the corresponding textbox with ascending order.

Steps:	1	2	3	4	5	6	7	8
Standard value:	0.46	1.12	1.85	2.53	3.15	3.76	4.37	4.86
Measured value:	0.48	1.15	1.88	2.58	3.18	3.81	4.40	4.97

Pay Attention to Delete the original calibration before collect the calibration value!

3. Press calibration button to pop up the dialog box of calibration curve equation, the calibration parameter which need to be downloaded to the instrument can be check here.

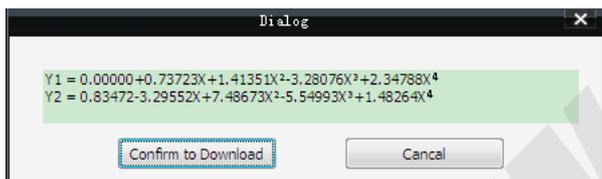

4. Press the confirm download button, and the software transmits the calibration data to the densitometer, after the calibration is completed, densitometer window will display E.3, indicating that the calibration is complete.

The meaning of densitometer window shows

Display	Meaning
E.1	Zero Calibration
E.2	Over-limit Measurement
E.3	Calibration Data Download successful ly
E.4	Calibration Data Delete Successful ly
E.5	Reading Version Number Successful

ATTENTION

1. The instrument is a precision measuring instrument. It should be keep away from dusts, humidity, alkaline and acid objects, and magnetic fields.
2. The dust is easy to fall into the light aperture, so after a period of time, if the instrument do not display 0.00 when calibrating, please open the light source shell with tape, then gently wipe the dust on the light-emitting diode with a cotton swab dipped in alcohol to ensure the normal use of the instrument.
3. Please keep the density tablet clean. Use it only when you are not sure about the accuracy of the measured values. If the value is not accurate, please use the step density tablet and calibration software to calibrate the instrument.
4. When the density values are out of the prescribed range, the measurement data are still has reference value. Please contact manufacturer if there is any problem.