




4110-9D98

Code
4110-□□□□

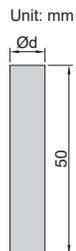

Ordering examples:

| | |
|----------|------------|
| Diameter | Code |
| 0.21mm | 4110-0D21 |
| 5.56mm | 4110-5D56 |
| 16.00mm | 4110-16D00 |

Note : "D" stands for "."

| Diameter Ød (mm) |
|---------------------------------|
| 0.20, 0.21, 0.22, 0.23, … 1.00 |
| 1.01, 1.02, 1.03, 1.04, … 2.00 |
| 2.01, 2.02, 2.03, 2.04, … 3.00 |
| 3.01, 3.02, 3.03, 3.04, … 4.00 |
| 4.01, 4.02, 4.03, 4.04, … 5.00 |
| 5.01, 5.02, 5.03, 5.04, … 6.00 |
| 6.01, 6.02, 6.03, 6.04, … 7.00 |
| 7.01, 7.02, 7.03, 7.04, … 8.00 |
| 8.01, 8.02, 8.03, 8.04, … 9.00 |
| 9.01, 9.02, 9.03, 9.04, … 10.00 |

| Diameter Ød (mm) |
|-------------------------------------|
| 10.01, 10.02, 10.03, 10.04, … 11.00 |
| 11.01, 11.02, 11.03, 11.04, … 12.00 |
| 12.01, 12.02, 12.03, 12.04, … 13.00 |
| 13.01, 13.02, 13.03, 13.04, … 14.00 |
| 14.01, 14.02, 14.03, 14.04, … 15.00 |
| 15.01, 15.02, 15.03, 15.04, … 16.00 |
| 16.01, 16.02, 16.03, 16.04, … 17.00 |
| 17.01, 17.02, 17.03, 17.04, … 18.00 |
| 18.01, 18.02, 18.03, 18.04, … 19.00 |
| 19.01, 19.02, 19.03, 19.04, … 20.00 |

1. The product is used to measure the size of the hole.
2. Usage
 - a. Check whether there are rust or stains on the outer surface of the pin gauge, if so, wipe it clean.
 - b. Find the object to be measured, visually inspect the size of the hole to be measured, and select the closest one from the pin gauge box.
 - c. Put the gauge vertically into the hole to be measured, if the gauge can enter the hole, indicating that there is a margin of this hole, you can choose a larger gauge again test.
 - d. Record the maximum and minimum values of the pin gauge can enter and can not enter, so as to determine the size of the hole.
 - e. After use, gently wipe the gauge, oil to prevent rust, and put the gauge back to the original place.
3. Precautions
 - a. When measuring, the pin gauge should be inserted or pulled out along the axis of the hole, and should not be tilted or shaken.
 - b. The force used during measurement should be as small as possible, and it is not allowed to push or rotate the gauge with force.
 - c. After use, gently wipe the gauge, oil it to prevent rusting, and place it in a cool and dry place.