



## 5401-TC11

### COATING THICKNESS GAUGE

### OPERATION MANUAL

PLEASE SCAN QR CODE TO  
WATCH THE OPERATION  
VIDEO OF PRODUCTS.



# CONTENTS

CONTENTS .....	1
1 Overview.....	3
1.1 Measuring Principles.....	6
1.2 Introduction.....	9
1.3 Technical Parameters.....	12
2 Operation .....	13
2.1 Measuring steps .....	13
2.2 System and advanced setup.....	18
2.3 Functions and operation method.....	22
2.4 About measure and error.....	41
3 Calibration of the gauge .....	43

3.1	Calibration block .....	43
3.2	Calibration Plate .....	44
3.3	Calibration method.....	45
4	Factors affecting the measuring accuracy.....	71
5	Maintenance and repair .....	72
5.1	Work environment.....	72
5.2	Battery replacement.....	72
	Appendix .....	74

# 1 Overview

This compact, handy pocket gauge is designed for non-destructive, fast and precise coating thickness measurement. The principal applications lie in the field of corrosion protection. It is ideal for manufactures and their customers, for offices and specialist advisers, for paint shops and electroplaters, for the chemical, automobile, shipbuilding and aircraft industries and for light and heavy engineering.

## **Features:**

- With different external probes, the gauge can be applied to measuring thickness of non-magnetic coating on magnetic

metal substrate, as well as non-conductive coating on non-magnetic metal substrate.

- High precision sample chip and dedicated temperature compensation model used for high precision measurement
- Efficient filtering algorithm used for Anti-electromagnetic interference
- Probe can be re-matched with the machine after wear
- High Precision Single Point Measurement, Scan Mode, Differential Mode and Alarm Mode support
- Zero Calibration, One-Point Calibration, Two-Point Calibration and Basic Calibration can be used for system error auto correction

- USB Interface used for communication
- Contrast adjustable and backlight selectable
- Stability indicator for measuring status monitoring
- Battery indicator for battery quantity monitoring
- Thickness and time information can be stored completely
- Up to 500 measurements storage.
- Give five statistical values: average, maximum, minimum, measure number, and standard deviation.
- Beep prompting.
- Auto power off function to conserve battery life.

## 1.1 Measuring Principles

The gauge adopts two thickness-measuring methods: magnetic induction method and eddy current method.

Magnetic Induction method: The probe and the magnetic metal substrate will form a closed magnetic circuit when probe contacting with the coating; the magnetic resistance of closed magnetic circuit varies due to the existing of non-magnetic coating. The thickness of the coating can be measured through the variation of magnetic resistance.

Eddy current method: The high frequency alternating current generates an electromagnetic field in the probe coil; eddy current

will be formed on metal substrate when the probe contacting with the coating, and the eddy current has an effect of feedback on the coil in probe. The thickness of the coating can be calculated through measuring the effect of feedback.

The range of applications is indicated by the probes available.

- F probes work on the magnetic induction principle and should be used for non-magnetic coatings such as aluminum, chrome, copper, zinc, paint and varnish, enamel, rubber etc., on an iron or steel substrate; they are also suitable for alloyed and hardened magnetic steel.

- N probes work on the eddy-current principle and should be used for insulating coatings on all non-ferrous metals and on austenitic

stainless steels, e.g. paint, anodizing coatings, ceramics, etc.  
applied on aluminum, copper, zinc die-casting, brass, etc.

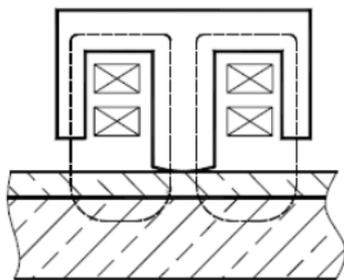


Figure 2 Principle of magnetic induction method

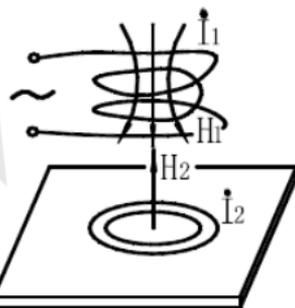


Figure 2 Principle of eddy current method

## 1.2 Introduction



Figure 3 Schematic view


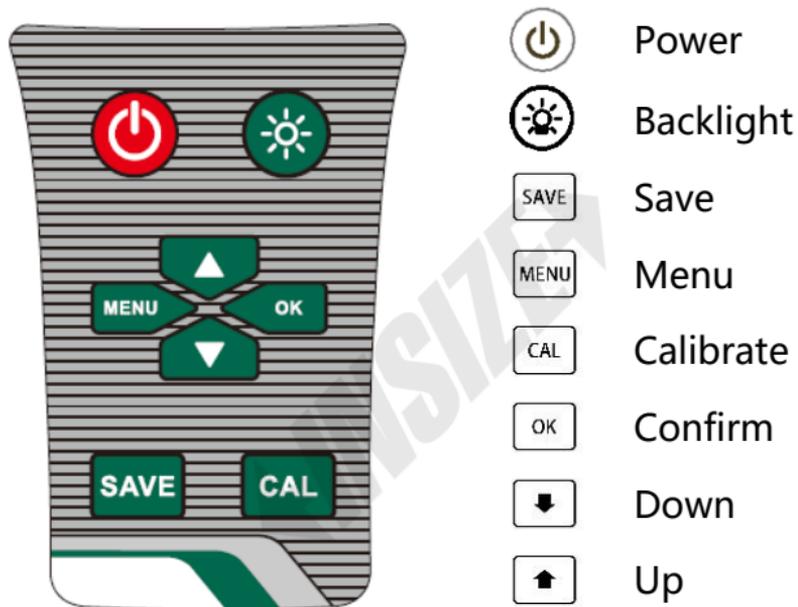


Figure 4 Keypad view

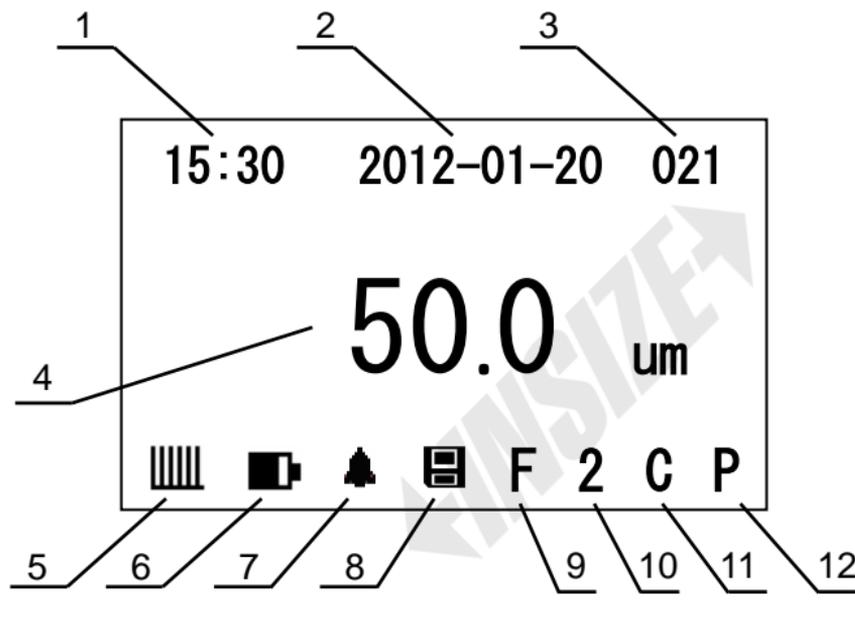

1. System Time
2. System Date
3. Storage
4. Measurements
5. Coupling Status
6. Battery Sign
7. Alarm Sign
8. Auto-Save Sign
9. Probe Type
10. 2-Point Cal Sign
11. Temperature Compensation Sign
12. Measure Mode

Figure 5 LCD display

## **1.3 Technical Parameters**

### **1.3.1 Measuring Range and Accuracy (see Table 1)**

### **1.3.2 Working Environment**

- Temperature: 0°C ~ 40°C
- Humidity: 20%RH ~ 90%RH
- Without strong magnetic field

### **1.3.3 Power**

- 3 \* AAA alkaline batteries

### **1.3.4 Size and Weight**



- Size: 150mm×70mm×30mm
- Weight: about 160g

## 2 Operation

Please read Chapter 3 (Calibration of the gauge) and Chapter 4 (Factors affecting the measuring accuracy) carefully before using the gauge.

### 2.1 Measuring steps

- a) Preparing the measuring material.
- b) Power on: Put the probe into an **open space**, and press the key . Do not put the probe close to any metal material before the probe type indicator "F" or "N" is shown.

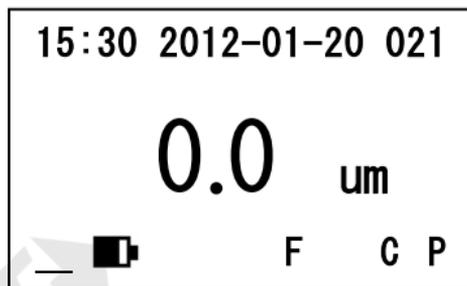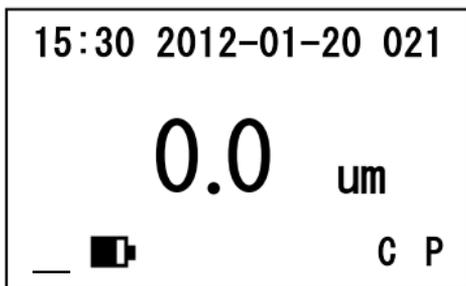


Main Interface (MI) – No probe


MI – Probe type “F”

- c) Check the battery information, and change the battery if necessary.
- d) Check the probe type, and re-connect the probe if the type indicator is incorrect.
- e) Calibrate the gauge if necessary according to the calibration method shown in Chapter 3.
- f) Measuring: Put the probe close to the measuring material

perpendicularly and rapidly after the temperature calibration indicator “C” shown, and press the protecting jacket lightly to keep the contact closely. Then the thickness will be shown on the LCD screen accompany with a beep indication, and the measurement can be repeat after bringing up the probe.

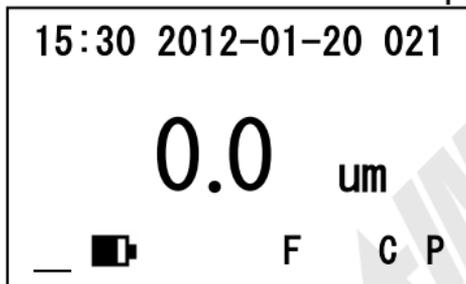

MI – before measuring

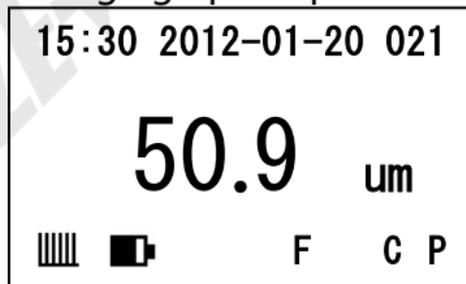

MI – after measuring

- g) Power off: Press the key  to shutdown immediately or the gauge will be power off automatically in about 2 minutes, and

the standby time can be set according to section 2.2.2  
Advanced setup steps.

**Note:**

- 1) Zero Calibration should be done before measuring the coating thickness on different property of the base material, which includes material type, base thickness, base curvature and surface rough of the base.
- 2) An error result may be shown if the probe is not stable during the measurement.
- 3) During the measuring process, the feature of the probe will be changed while the temperature is drifting, and the measurement distortion will be found. The technic of temperature compensation has been used in the gauge to process the real-time calibration of the temperature drifting.

To ensure that the technic of temperature compensation works effectively, measuring operation should be processed after the real-time temperature compensation indicator "C" appears.



←INSIZE→

## 2.2 System and advanced setup

Most of the parameters are configured by basic setup of advanced setup. For basic setup, language, unit, measure mode, alarm, temperature compensation, two-point calibration and beep can be set. For advanced setup, load default, statistical data, erase file, erase all data, precision, threshold, margin, contrast, and standby time can be set.

### 2.2.1 Basic setup steps


- a) Press the key  in the main interface to choose the tab "MENU" , and press the key  to enter the setup menu.

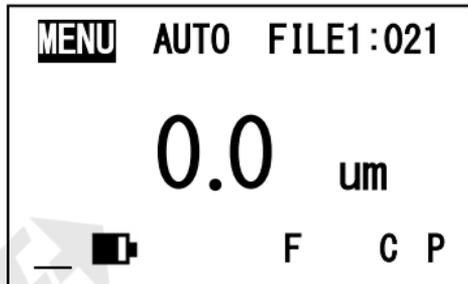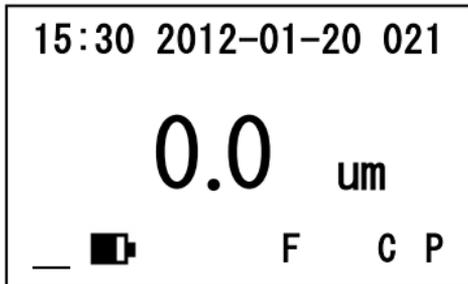


Main Interface (MI)

Menu Interface

- b) Press the key  or the key  to choose the tab "Basic setup", and press the key  to enter the basic setup menu.
- c) Press the key  or the key  to choose the item, and press the key  to switch the item.

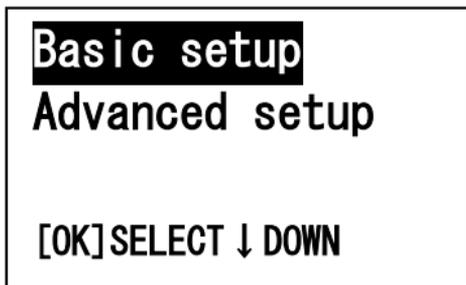

Setup Select Interface

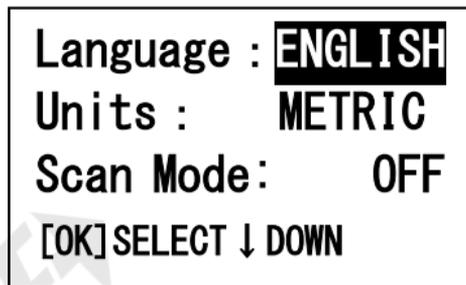


Basic setup Interface

- d) Press the key  to return.

## 2.2.2 Advanced setup steps

- a) Press the key  in the main interface to choose the tab "MENU" , and press the key  to enter the setup menu.
- b) Press the key  or the key  to choose the tab "Advanced setup" , and press the key  to enter the

advanced setup menu.

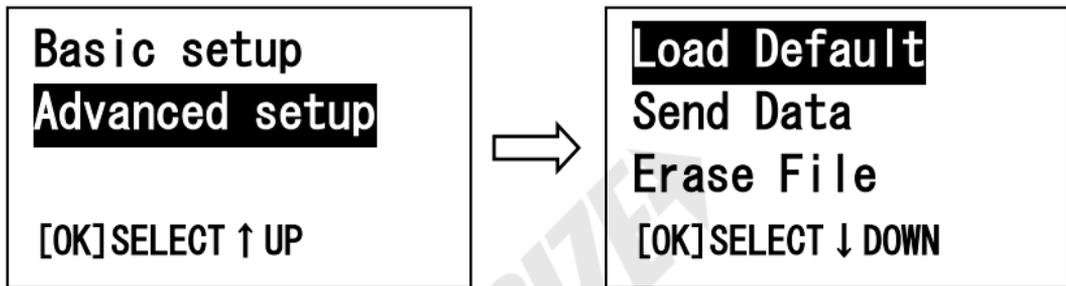

Setup Select Interface

Advanced setup Interface

- c) Press the key  or the key  to choose the item, and press the key  to enter the item.
- d) Press the key  or the key  to configure the item, and press the key  to confirm or press the key  to return.

## 2.3 Functions and operation method

This section introduces the main functions of the gauge and the detailed operation method.

### 2.3.1 Restore factory settings


One of the following two measure modes can be used:

- Fast way: Press the key  and  simultaneously to power on the gauge under power off status. Release the key  first, and then release the key  after “Load default” is shown on the screen.
- Normal way: Power on the gauge, and then enter the “advanced setup interface” (see 2.2.2).

## 2.3.2 Probe mode (Auto $\Leftrightarrow$ Magnetic $\Leftrightarrow$ Non-magnetic)

The probe type can be set by the following steps:

- a) Press the key  in the main interface to choose the tab "MAG" or "N-M" .

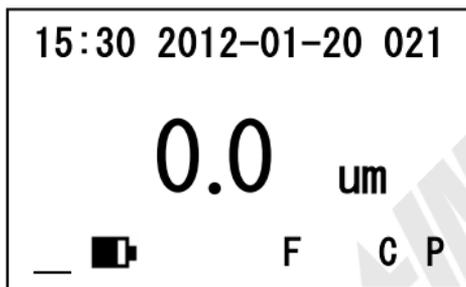


Main Interface



Probe Mode Interface (PMI)

- b) Press the key  to switch the tap: "AUTO" indicates the auto recognise mode. "MAG" indicates magnetic

probe, and "N-M" indicates non-magnetic probe.

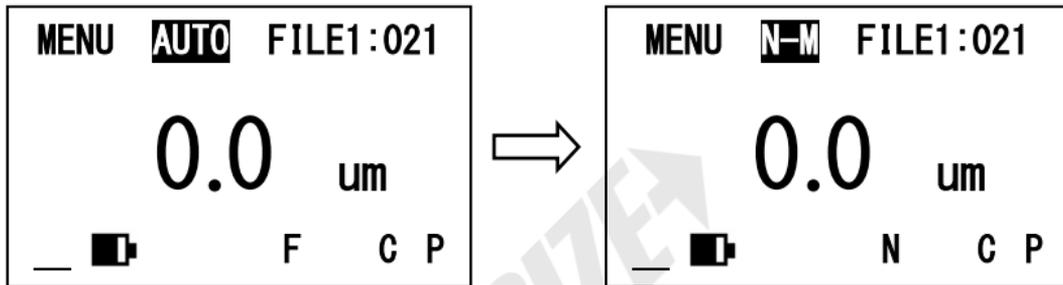


PMI- AUTO

PMI – N-M

Probe type will be shown in the probe type area on the bottom line of the LCD screen. "F" indicates F probe, "N" indicates N probe. In auto mode, no indicator will be shown in probe type area if the probe is not connected.

### 2.3.3 Measure mode

The gauge supports two measure modes: high precision mode and scan mode.

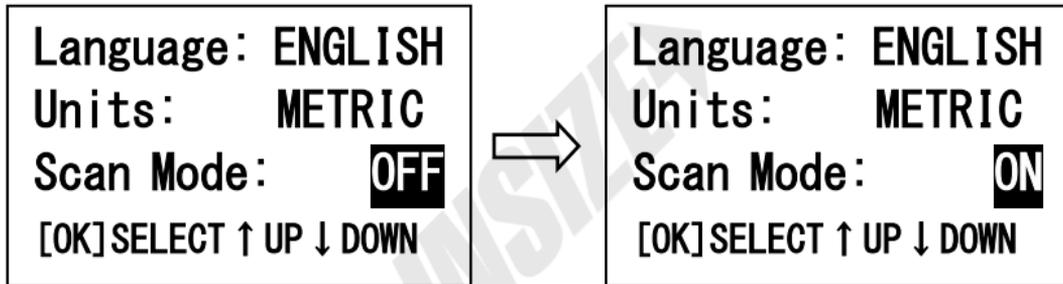


High Precision Mode


Scan Mode

The gauge works on high precision mode by default, the measure mode indicator shows “P” . To use scan mode, turn on the “Scan Mode” option in “Basic setup” menu (see

2.2.1), and the measure mode indicator shows "S" .

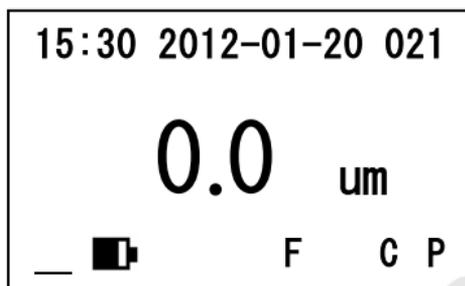

High Precision Mode

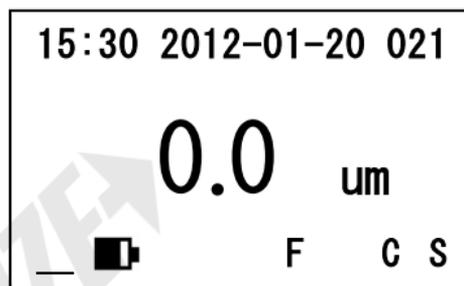

Scan Mode

In scan mode, about three readings will be shown on the LCD display every second, and online monitoring can be realized.

In high precision mode, the gauge can ignore error result automatically during multiple measurements and give the average value in final. The measuring time will increase about 2

seconds.

The high precision mode can be configured by the following parameters:

- Measuring precision: Measurement times for average. By setting this parameter higher, the measurement times will be more, the accuracy will be higher, and the measure time will be longer.
- Measuring Margin: The maximum error limit for data filtering. All the measure results over the error limit will be ignored while computing the average value. By setting this parameter lower, the error limit will be lower, and the accuracy will be higher. For some special environments,

measure result will be strongly influenced by outside magnetic disturbance, and the measuring margin should be set little higher to insure that the high precision mode is working.

**Set Precision**  
**Set Threshold**  
**Set Margin**  
[OK] SELECT ↑ UP ↓ DOWN



**Margin : 02**  
[OK] to exit  
↑ to add  
↓ to reduce

Advanced setup interface

Set margin interface

See section 2.2.2, enter advanced setup interface, and press the key  or  to choose "Set precision" or "Set

margin" option. Press the key  to enter the configuration interface, and use the key  or  to modify the parameter. Then press the key  or  to return.

#### **2.3.4 Temperature compensation**

During the measuring process, the feature of the probe will be changed while the temperature is drifting, and the measurement distortion will be found. The function of temperature compensation uses the advanced temperature compensation arithmetic to process the real-time calibration of the temperature drifting. So the influence of temperature is virtually eliminated, and the measurement is more accurate.

The function of temperature compensation can be used by the following steps:

- a) See section 2.2.2, enter basic setup interface, and press the key  or  to choose "Temperature" . Press the key  to turn on the temperature compensation.

Diff. Mode: ON  
Avg. Mode: ON  
Temperature: **OFF**  
[OK] SELECT ↑ UP ↓ DOWN




Diff. Mode: ON  
Avg. Mode: ON  
Temperature: **ON**  
[OK] SELECT ↑ UP ↓ DOWN

Temperature compensation off

Temperature compensation on

- b) Back to the main interface, and wait for few seconds. The

real-time temperature calibration will be success after the indicator "C" appears.

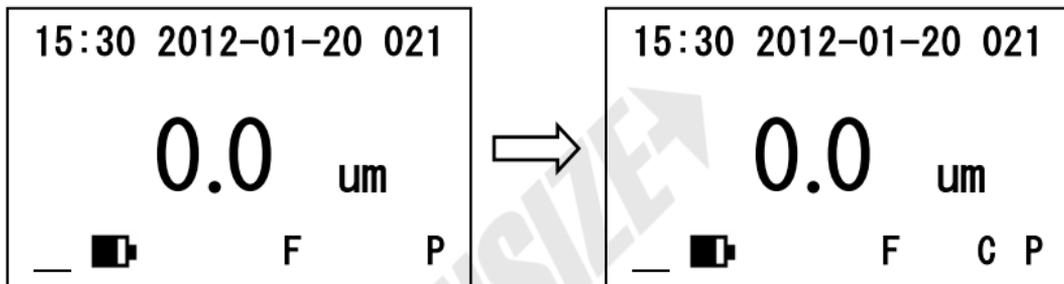

Temperature compensating

Compensation completed

- c) Put the probe close to the measuring material and measure.
- d) Bring up the probe, and waiting for the appearance of the indicator "C" for the next measurement.

## 2.3.5 Data storage


A group of measuring information includes measurement, probe type, measure time and measure date can be stored.

There are five storage files, and 100 measurements for each file.

### 2.3.5.1 Set or erase active file

Active file can be set or erased by the following steps:

- Press the key  in the main interface, and choose the tab "FILE" .
- Press the key  or the key  to switch the active file from file1 to file 5.
- Press the key  to clear the active file.
- Press the key  to view the data logger.

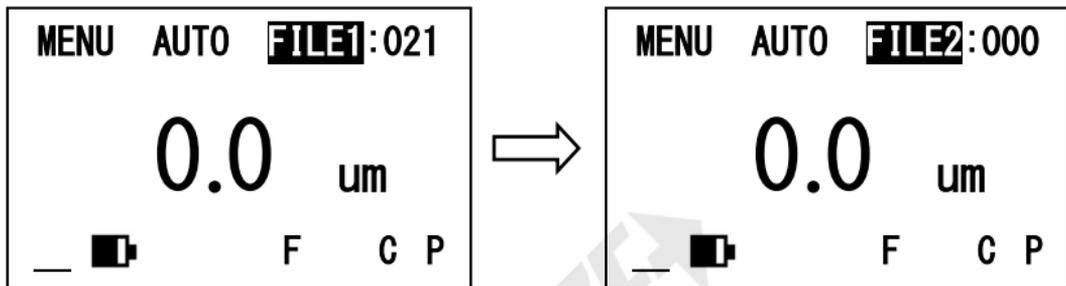

Set active file – FILE1

Set active file – FILE2

**Note: Data storage, data removing and data statistic are both proceed for the active file.**

### 2.3.5.2 Save data


Up to 100 results could be stored for each file, and the gauge provide five files in total.

The data can be stored by one of the following method:

- Manually: Measure result can be saved by pressing the key  in the main interface.
- Automatically: Measure result is saved to the active file automatically. The auto-save indicator “” shows in status bar.  
Hold the key  in main interface for about two seconds to switch the storage mode between “Manually” and “Automatically”

### 2.3.5.3 Using the data logger

The saved results could be read or deleted by the following steps:

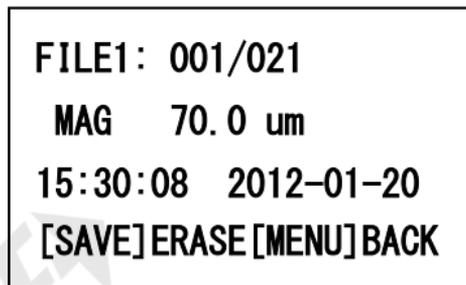

Set active file – FILE1

Manage FILE1


- a) Press the key  in the main interface to choose the tab "FILE" , and press the key  to enter the data viewer interface.
- b) Press the key  or the key  to look over the data
- c) Press the key  to delete selected data.
- d) Press the key  to calculate the statistics for all data in

active file, which includes maximum, minimum, average and standard deviation.

- e) Press the key  to send all data in active file to PC or portable printers.
- f) Press the key  to return.

#### **2.3.5.4 Erase storage file**

See section 2.2.2, enter advanced setup interface. Press the key  or the key  to choose the tab "Erase file" or "Erase all data" . And then press the key  to confirm the deletion or press the key  cancel the deletion. For the tab "Erase file" , only active file is cleared. And for the tab "Erase all data" , all of five files are cleared.

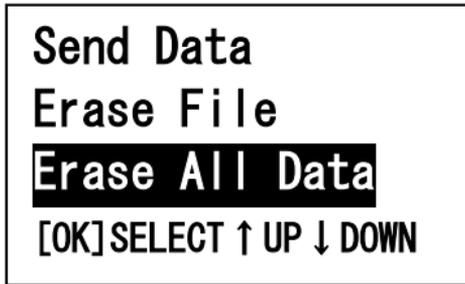


Advanced setup interface




Erase confirm interface

## 2.3.6 Set measure threshold

See section 2.2.2, enter advanced setup interface, and press the key  or  to choose “Set threshold” option. Press the key  to enter the configuration interface, and use the key  or  to modify the parameter. Then press the key  or  to return.

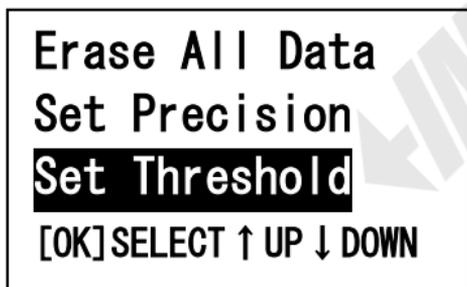

Advanced setup interface

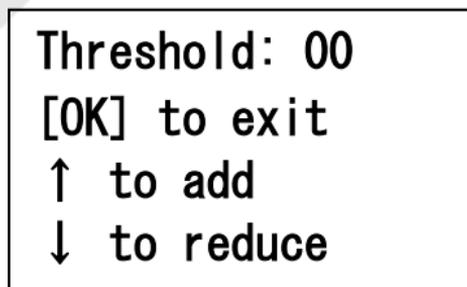

Set threshold interface

Measure threshold is the minimum variation of the thickness for the measure. All the measure results that the variation is less than the threshold are ignored.

### 2.3.7 Set standby time

See section 2.2.2, enter advanced setup interface, and press the key  or  to choose "Set standby time" option. Press the key  to enter the configuration interface, and use the key  or  to modify the parameter. Then press the key  or  to return.

Set Margin  
Set Contrast  
**Set Standby Time**  
[OK] SELECT ↑ UP ↓ DOWN



Standby : 02 min  
[OK] to exit  
↑ to add  
↓ to reduce

Advanced setup interface

Set standby time interface

If the standby time is set and arrived, the gauge will power off automatically after the backlight is blinking 6 times. If the beep mode is on, beep indication will appear accompany with the backlight blinking. And the automatic power off process can be interrupt by pressing any key during the backlight blinking.

## 2.4 About measure and error

- All the measurements will be kept in a decided error range (see Table 1) if a proper calibration is done.
- In the view of statistics, one data is unreliable. So each measure result shown in the screen is an average value of multiple measurements.
- To achieve a more accurate measure result, multiple measurements on the same point is needed, and the error data should be ignored.
- For the high precision mode, multiple measurements and data filtering are automatically proceed by the gauge, so the user could achieve an accurate measure result much easier through this mode.

So the final coating thickness is:  $CH = M+S+\delta$ ,

Where CH is the coating thickness, M is the average value of multiple measurements, S is the standard deviation,  $\delta$  is the allowable deviation

←INSIZE→

## 3 Calibration of the gauge

Calibration should be performed in the measuring environment for higher accuracy.

### 3.1 Calibration block

Known thickness foil and known thickness coating slice can be considered as calibration block.

a) Foil

For magnetic induction method, foil indicates non-magnetic metal or non-metal foil. And for eddy current method, foil usually indicates plastic foil. Foil is easier for calibration on curved surface.

b) Coating slice

Coating slice is a known thickness and even coating which is solid combined with the plate. For magnetic induction method, the coating is non-magnetic. And for eddy current method, the coating is non-electric.

### **3.2 Calibration Plate**

- a) For magnetic induction method, the magnetic and roughness of the plate should be the same as the measuring material. For eddy current method, the electric of the plate should be the same as the measuring material.
- b) For the measuring material that the plate is according to the critical thickness list in "Table 1" , two kinds of calibration could be used:

- i. Calibrate on a metal foil which has the same thickness as the measuring material plate.
  - ii. Calibrate with a metal mat which has the similar electric and enough thickness. The metal mat and the metal plate should close to each other. And this method is not suit for the material which has coating on both sides.
- c) For the measuring material which cannot be calibrated on the plane, the curve of the calibration plate should be the same as the measuring material.

### **3.3 Calibration method**

The gauge has three calibration methods: zero calibration, one-point calibration and two-point calibration. And the


gauge also has two calibration methods for the probe: basic calibration and temperature coefficient calibration.

### **3.3.1 Zero calibration**

For the measurement on different plate, zero calibration must be performed. Deviation will appear if the feature of calibration plate and measuring material is different.

Zero calibration can be performed by the following steps:

- a) Set measure mode to high precision mode ( the measure mode indicator shows "P" , see 2.3.3)
- b) Measure on the plate, and the screen display  $\langle \times \times \mu\text{m} \rangle$ .
- c) Press the key  , and the screen display  $\langle 0.0 \mu\text{m} \rangle$ .

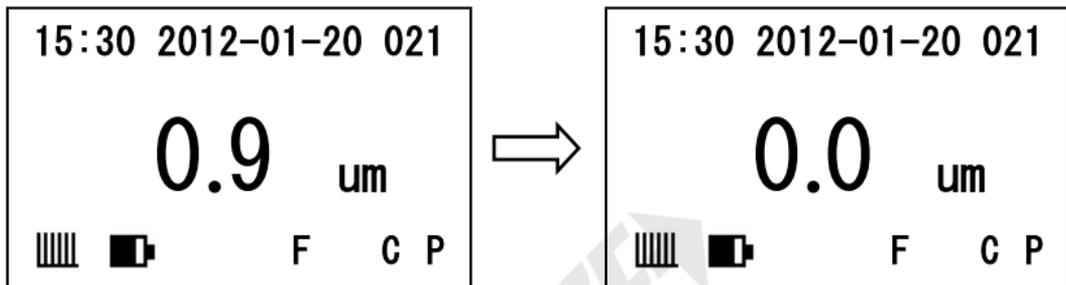

Zero calibration – before

Zero calibration – after


Repeat step a~c will achieve higher accuracy.

***NOTE: Zero calibration should be preform on the base material which has the same property with the measure material. And the appendix plate is just used for checking the gauge.***

### 3.3.2 One-point calibration

Zero calibration should be substituted by one-point calibration if the base material cannot be found.

- Set measure mode to high precision mode ( the measure mode indicator shows "P" , see 2.3.3)
- Hold the key  for about two seconds in main interface to enter "one-point calibration" mode.


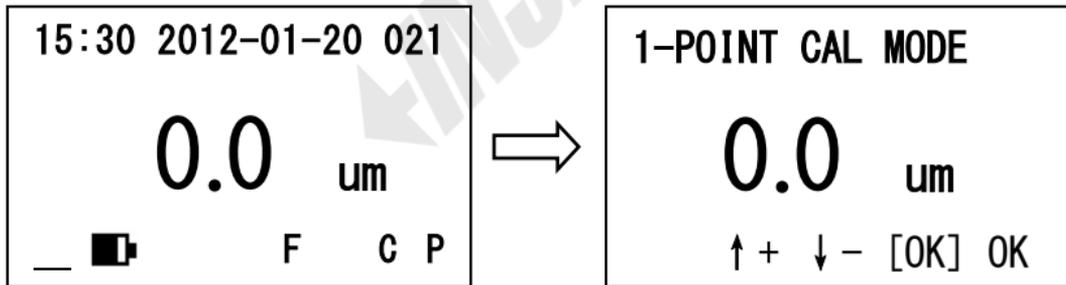


Main interface

One-point calibration

c) Measure on a foil, and the screen display  $<xxx\mu\text{m}>$ .

d) **Bring up the probe**, and press the key  and the key  to correct the thickness value.

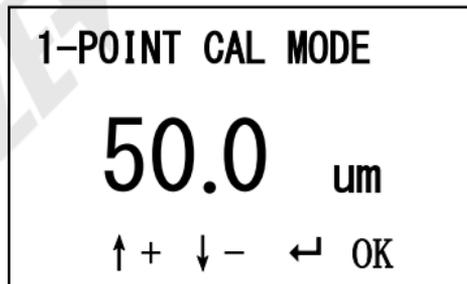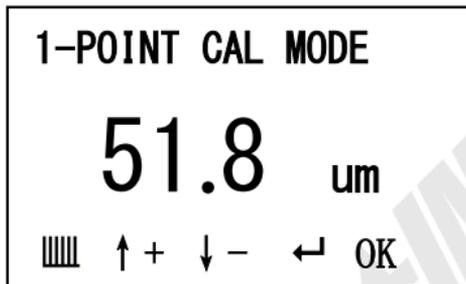

One-point calibration – Measure

Modify thickness value

e) Press the key  to confirm; or press the key  to cancel; or press the key  to clear the older zero

calibration information.

Repeat step a~e will achieve higher accuracy.

Calibration thickness should less than 200um for one-point calibration. Otherwise, the accuracy for thin coating will be lower.

***NOTE: One-point calibration is a complementary of zero calibration. Previous zero calibration is invalid if one-point calibration have been perform, vice versa.***

### **3.3.3 Two-point calibration**

Two-point calibration is used for increasing measurement accuracy for a small range. One of the following two methods could be used for two-point calibration:

- **One foil**

This method is used for measuring thin coating.

- a) See section 2.2.2, enter basic setup interface, and press the key  or  to choose "2-Point CAL" . Press the key  to turn on the Two-point calibration.

Avg. mode: OFF  
Temperature: ON  
2-Point CAL OFF  
[OK]SELECT ↑ UP ↓ DOWN



Avg. mode: OFF  
Temperature: ON  
2-Point CAL ON  
[OK]SELECT ↑ UP ↓ DOWN


Two-point calibration - On

Two-point calibration - Off

- b) Perform zero calibration on the plate. See 3.3.1 "Zero

calibration” for more details.

- c) Measure on a foil, and the screen display  $\langle xxx\mu\text{m} \rangle$ .  
d) Press the key  or the key  before bringing up the probe to enter “two-point calibration” mode.

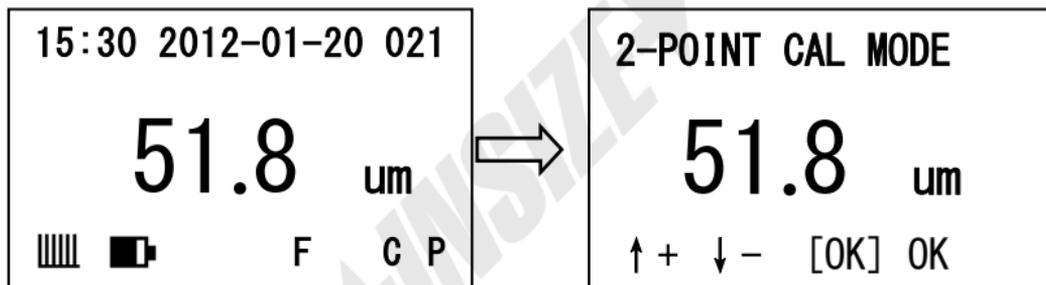


MI – measure

Two-point calibration interface

- e) Press the key  and the key  to correct the thickness value.

- f) Press the key  to confirm; or press the key  to cancel; or press the key  to clear the older two-point calibration information.

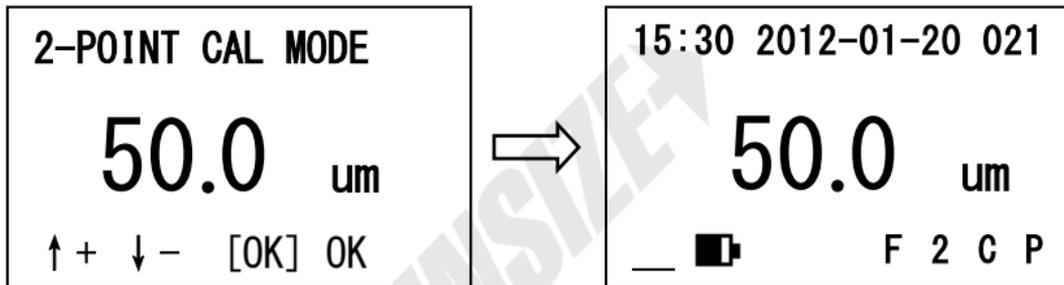

Correct thickness value

Two-point calibration affect


Repeat step c~f will achieve higher accuracy.

- **Two foils**


- a) Turn on two-point calibration from basic setup menu, see

One foil.

- b) Perform one-point calibration on the thin foil. See 3.3.2 “One-point calibration” for more details.
- c) Measure the thick foil, and the screen display  $\langle \times \times \times \mu\text{m} \rangle$ .
- d) Press the key  or the key  before bringing up the probe to enter “two-point calibration” mode.

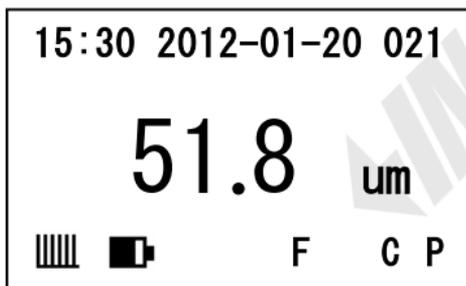


MI – measure

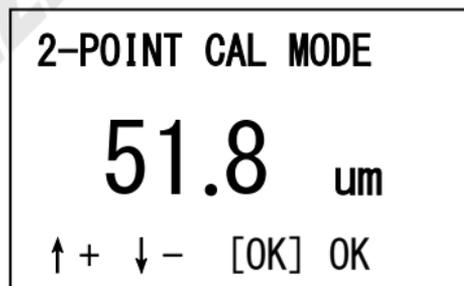


Two-point calibration interface

- e) Press the key  and the key  to correct the thickness value.
- f) Press the key  to confirm; or press the key  to cancel; or press the key  to clear the older two-point calibration information.

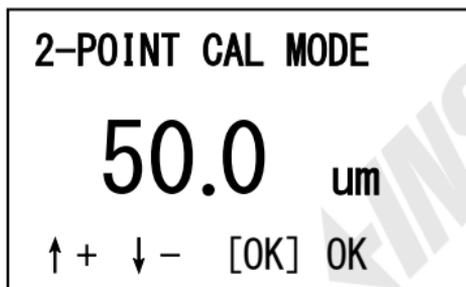

Correct thickness value

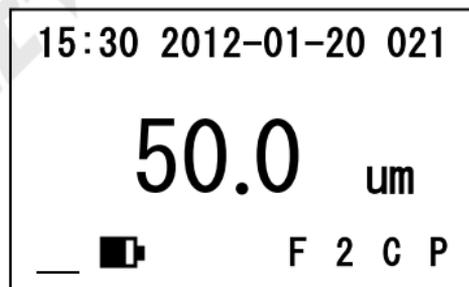

Two-point calibration affect

Repeat step c~f will achieve higher accuracy.

The indicator "2" indicates that the two-point calibration is

effective.

***Note: Two-point calibration information will be cleared automatically after zero calibration.***

### **3.3.4 Basic calibration for the probe**

Basic calibration should be performed for the following situations:

- a) Change the probe.
- b) The header of the probe is wear.
- c) The probe has been repaired.
- d) Special usage.

Operation steps:


- a) Press the key  during power on to enter the basic

calibration mode.

- b) Press the key  to change probe type. If the screen display the indicator "F" on the right side of the top line, the calibration will be performed for magnetic probe; And if the screen display the indicator "N" on the right side of the top line, the calibration will be performed for non-magnetic probe.



**INFINITY: F**  
**13536** us  
← NEXT

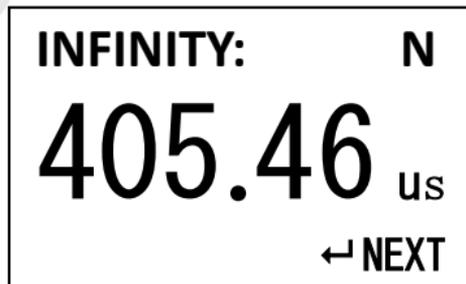


**INFINITY: N**  
**405.46** us  
← NEXT

Basic calibration – F probe

Basic calibration – N probe

- c) Calibrate infinity point: Put the probe away from the plate, and then press the key  while the value is stable. For probe F, the value should be between 13500 and 13600, and press the key  to re-match the probe if the value is out of range. For probe N, the value should be between 395 and 430, and the probe should be changed if the value is out of range.
- d) Calibrate zero point: Put the probe close to the plate, and then press the key  while the value is stable. For probe F, the value should be between 7000 and 10000; For probe N, the value should be between 370 and 390.

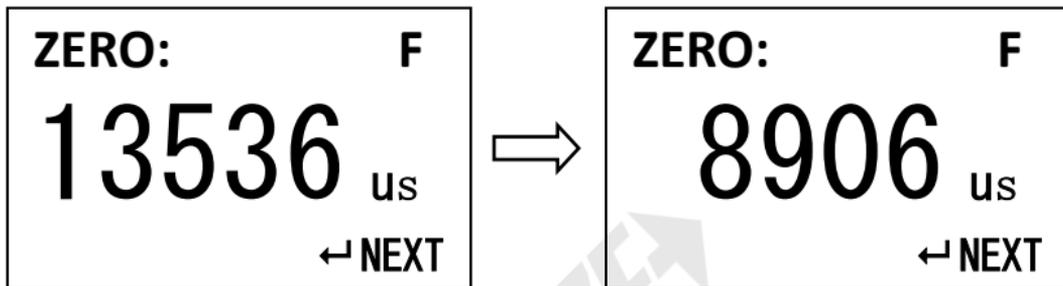

Calibrate zero point – before

Calibrate zero point – after

e) Calibrate 5 to 10 known thickness points:


- i. Press the key  or the key  to correct the thickness on the top line.



Calibrate know thickness

Modify thickness value

- ii. Measure the foil, and then press the key  while the value is stable, or press the key  to skip this point.

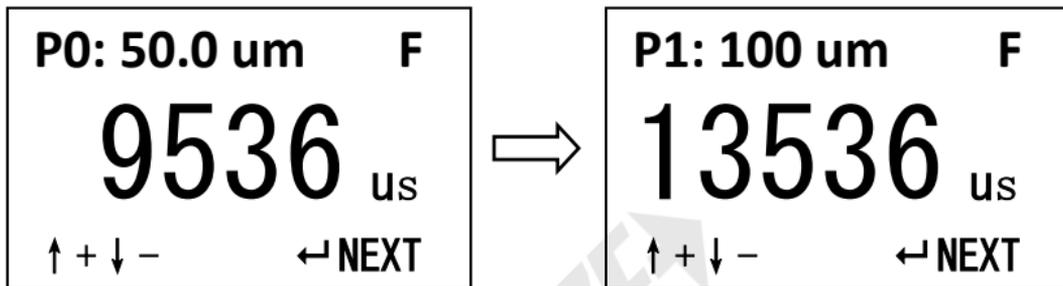

Calibrate know thickness – after

Calibrate another thickness

- f) All the calibration information will be shown again after all the points completed. And the indicator “PASS” or “FAIL” can be seen from the bottom line. Press the key

to turn to the main interface; or **press the key**

**to save the calibration information to default.**

Check Couple  
13336 us  
PASS

Check Couple  
13336 us  
FAIL

Basic calibration completed

Basic calibration failed

***Note: The last calibration point can not be skipped.***

***Skipped point should be less than 5.***

***The default calibration points can be measured by stacking the folis provided with the main unit. Calibration point should be gradually changed from small to large.***

### 3.3.5 Temperature coefficient calibration for the probe

- **Calibrate the temperature coefficient**


Temperature coefficient should be modified for the following situations:

- a) Change probe, and the temperature coefficient of the probe is unknown.
- b) Measure result is obviously changed through the temperature drifting, and the measurement distortion is light.
- c) Special usage.


Operation steps:

- a) Press the key  during power on to enter the temperature coefficient calibration mode.

- b) Press the key  to change probe type, the symbol “F” on the top right indicates probe F, and the symbol “N” indicates probe N.

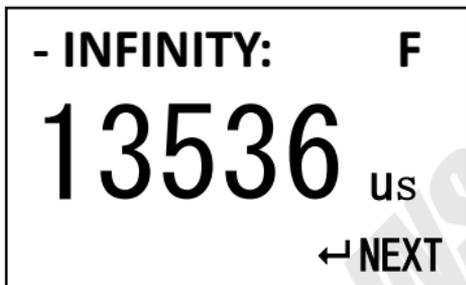


Temperature interface – F

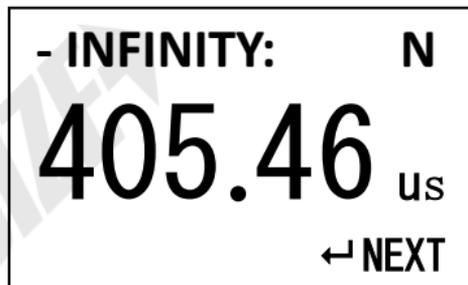

Temperature interface – N

- c) Calibrate infinity under the first temperature condition: Put the probe away from the plate, and then press the key  while the value is stable.

- d) Calibrate zero under the first temperature condition: Put the probe close to the plate, and then press the key  while the value is stable.

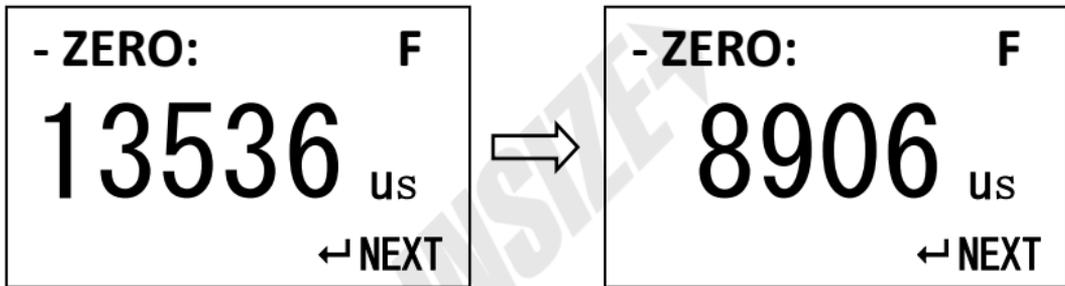


Calibrate first zero – before

Calibrate first zero – after

- e) Calibrate infinity under the second temperature condition:  
Change the temperature, and re-measure the infinity point.
- f) Calibrate zero under the second temperature condition:


re-measure the zero point.

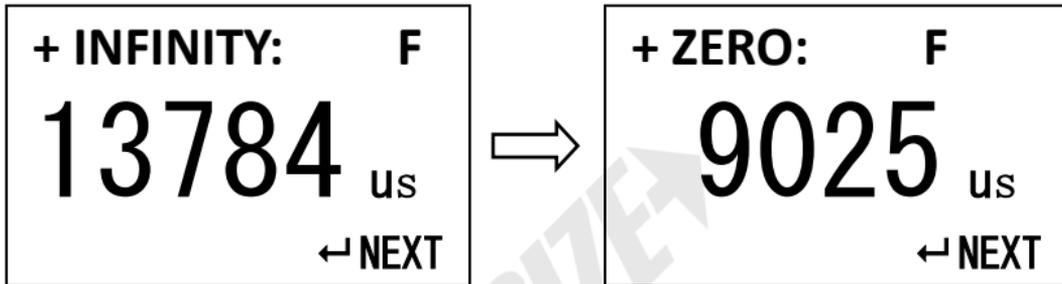

Calibrate second infinity

Calibrate second zero

g) The temperature coefficient will be shown after the calibration. And the indicator "PASS" or "FAIL" can be seen from the bottom line. Press the key  to turn to the main interface.

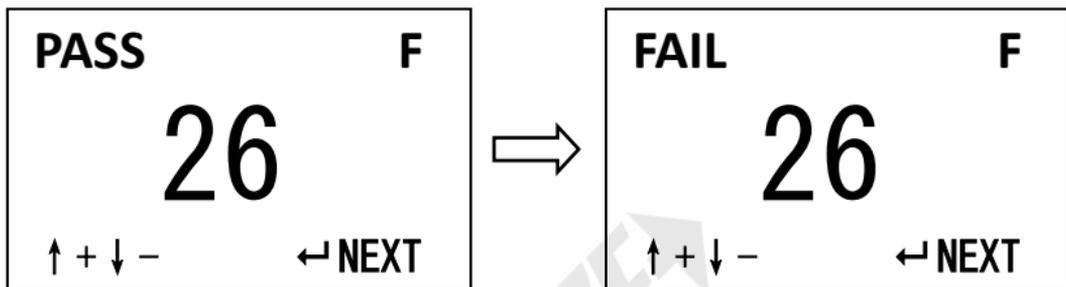

Temperature calculate completed

Temperature calculate failed

***Note: For F type, the difference between two measurements of infinity point should be more than 50; for N type, should be more than 0.5.***

- **Modify the temperature coefficient**


Temperature coefficient should be modified for the following situations:

- a) Change probe, and the temperature coefficient of the probe is known.
- b) Measure result is obviously changed through the temperature drifting, and the measurement distortion is light.
- c) Special usage.

Operation steps:



Temperature interface – F

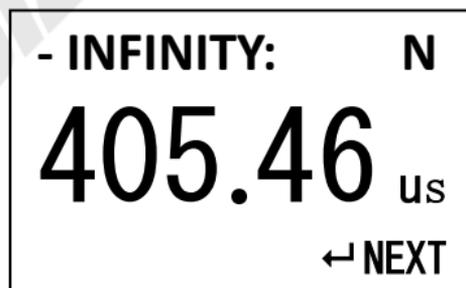


Temperature interface – N

- a) Press the key  during power on to enter the temperature coefficient calibration mode.
- b) Press the key  to change probe type, and use the key  to confirm.
- c) Press the key  to skip the calibration steps, and enter the temperature coefficient display.




Calibrate first zero

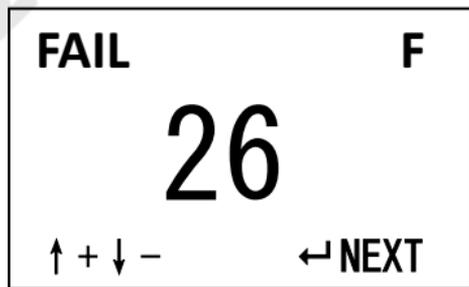


Coefficient adjust

d) Press the key  or the key  to modify the temperature coefficient, and press the key  to confirm and enter the main interface.

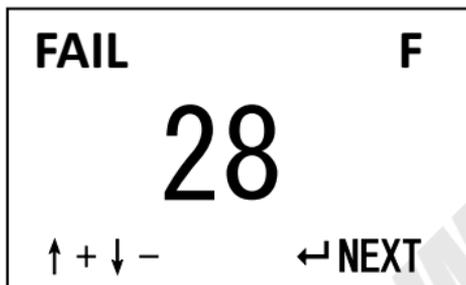

Coefficient adjust

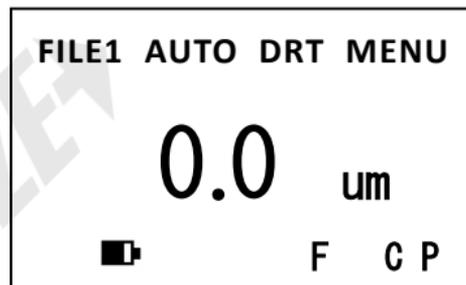

Main Interface

## 4 Factors affecting the measuring accuracy

Factors \ Method	Magnetic Induction	Eddy Current
Magnetic property of the plate	▲	▲
Electric property of the plate		▲
Thickness of the plate	▲	▲
Edge effect	▲	▲
Curvature	▲	▲
The deformation of material	▲	▲
Roughness or the surface	▲	▲
Magnetic field	▲	▲
Attachments	▲	▲
Pressure of the probe	▲	▲
Direction of the probe	▲	▲

## 5 Maintenance and repair

### 5.1 Work environment

Strict avoidance of collision, heavy dust, moisture, strong magnetic field, oil, etc.


### 5.2 Battery replacement

The battery should be replaced by the following steps while the battery indicator changes to "  " :

- 1) Press the key  to power down the gauge.
- 2) Take off the battery compartment cover and take out the

battery pack.

- 3) Insert the connection plug of the new battery pack into the battery socket.
- 4) Reset the battery cover.
- 5) Turn on the gauge to check.

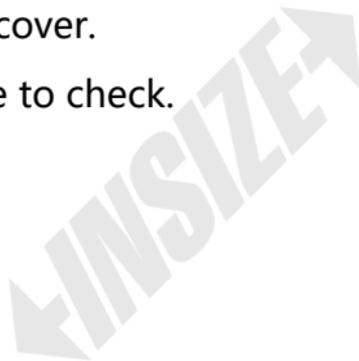

# Appendix

Table 1 **Technical parameters** (H - thickness value)

Probe type		F	N
Measuring principle		Magnetic induction	Eddy current
Measuring range ( $\mu\text{m}$ )		0 ~ 1500	0 ~ 1500
Low range resolution ( $\mu\text{m}$ )		0.1	0.1
Accuracy ( $\mu\text{m}$ )	Zero calibration / One-point calibration	$\pm(2\%H+1)$	$\pm(2\%H+1)$
	Two-point calibration	$\pm[(1 \sim 2)\%H+1]$	$\pm[(1 \sim 2)\%H+1]$
Measuring Condition (mm)	Min. radius of curvature	Bulge 1.5	Bulge 3
	Min. radius of area	$\Phi 7$	$\Phi 5$
	Critical thickness of plate	0.5	0.3

\* When N-probe is used for Chromium on Copper, the range is 0~40 $\mu\text{m}$

Table 2 **Probe selection reference**

<b>Plate</b> \ <b>Coating</b>	Non-magnetic Coating of Organic material (Such as: paint, enamel, plastic, anodizing, etc.)	Non-magnetic Coating of Nonferrous metal (Such as: Chromium, zinc, aluminum, copper, tin, silver, etc.)
Magnetic metal such as iron and steel	F type probe Range: 0 ~ 1500 $\mu\text{m}$	F type probe Range: 0 ~ 1500 $\mu\text{m}$
Nonferrous metal such as Copper, aluminum, brass, zinc, tin, etc.	N type probe Range: 0 ~ 1500 $\mu\text{m}$	N type probe (only for Chromium on Copper, Range: 0 ~ 40 $\mu\text{m}$ )



**←INSIZE→**

[www.insize.com](http://www.insize.com)